



PILAR

USER MANUAL (ENGLISH)

RAIS[®]

attika[®]
FEUERKULTUR

PRODUCTION NUMBER

Congratulations on your wood burning stove. Each stove has its own unique production number. The production number is located on the back of the stove, but it can also be found below. The number is the stove's identification and must be used in case of any enquiries related to the stove's warranty - so you have all the information together in case of any enquiries.

INSERT
PRODUCTION NUMBER

THIS MANUAL APPLIES TO THE FOLLOWING MODELS:

- Pilar



Pilar is available in different options:
Manual, CleverAir and ElectronicAir

PRODUCTION NUMBER	2
USER MANUAL	4
WOOD	5
Use approved fuels only	5
The wood must be dry	5
Your wood must fit the stove	5
FIRING	6
Recommended amount of wood for stroking the fire	6
Do not overfire	6
Lighting your stove for the first time	6
SETTING THE DAMPER	7
Manual air damper adjustment	7
LIGHTING YOUR STOVE CORRECTLY	8
Ignition and refuelling	8
CleverAir	11
Convection damper	11
ELECTRONICAIR	12
DISTANCE TO FURNITURE	15
COMBUSTION CHAMBER	16
Cleaning the flue	16
Removing the combustion chamber lining	16
MAINTAINING YOUR STOVE	17
CLEANING YOUR STOVE	18
GENERAL INFORMATION ON YOUR NEW STOVE	19
Convection	19
Glass system	19
CO ₂ and the environment	19
Ventilation	19
Shared flue	19
External air supply - Airstystem	19
NOMINAL TEST	20
TECHNICAL DATA	22
FREQUENTLY ASKED QUESTIONS - FAQ	24
WARRANTY	25
DOWNCYCLING	26

Revision: 0
Date: 08-10-2025

We reserve the right to make printing errors.

CONGRATULATIONS ON YOUR NEW STOVE

Congratulations on the purchase of your new wood-burning stove – and welcome to RAIS or attika! High quality, design and function go hand in hand in the stove you have selected.

For the latest tips, information and inspiration, follow us on our various channels:



We have put our hearts, souls and minds into each and every one of our products. We want you to enjoy using your stove for many years to come, so we have focused all our efforts on ensuring that this is possible.

You are now about to learn all about your stove – and turn your dream into reality. You will soon be enjoying using the stove in your home.

This user guide can help you get started with your new stove. You will receive an in-depth introduction to the following topics below:

- Wood
- Setting the damper and lighting your stove correctly
- Cleaning and maintaining your stove
- Frequently asked questions - FAQ

It is important for you to read up on all these topics so that you can get the maximum out of your wood burning stove. You can also return to the user guide if you have any problems or queries when you have been using your stove for a while. We hope you will find all the information that you need.

You can get in touch with your RAIS/attika dealer if you have any further questions.

It is important that the stove are used correctly for both environmental and safety reasons. Always make sure to observe all local precautions, including those referring to national and European standards, when operating the appliance.

Enjoy using your new stove!



Read and follow the user operating instructions.



Use recommended fuels.

- Type: Burning logs (I)



It is important for you to use dry, untreated wood and light the wood correctly so that your wood-burning stove can operate correctly. Which wood you should use and how to treat it prior to use are shown below.

USE APPROVED FUELS ONLY

General wood (wood that you have purchased or collected yourself) or pure wood briquettes are approved fuels. You must not use newspaper or similar as this will cause soot in your stove and give off contaminated smoke.

THE WOOD MUST BE DRY

If you can, bring in the wood a couple of days before you want to use it so that it is at room temperature. The wood must have a water content of 15-20%. In practice, this means your wood should be left to dry for at least one year (and ideally two) before you use it. As a result, it is a good idea to buy your wood early and organise good storage for it. Wood needs time to dry, and proper air drying can take up to 2 years depending on the type of wood and how it is stored.

Wood dries best when it is sawn and chopped. Place your wood in a well ventilated, sunny location protected from the elements, ideally under a lean-to or a woodshed, i.e. a shed with slatted sides. Avoid covering your wood, this will retain the moisture. Drying wood outdoors is almost always best because this ensures that plenty of air can circulate.

YOUR WOOD MUST FIT THE STOVE

The pieces of wood you use must fit the combustion chamber of your stove. Pieces of wood of a diameter greater than 10 cm should be chopped.

FUEL TYPE	Wood logs	
DESIGNATION	I	
LENGTH (RECOMMENDED)	Max. 30 cm	
STANDARD TEST FUEL	Beech, birch eller hornbeam	
MOISTURE CONTENT	12 - 25 %	



WARNING

Never use lacquered, laminated or impregnated wood, wood with a plastic coating, painted wood, chipboard, plywood, household waste, paper briquettes or coal. This may cause toxic smoke that smells unpleasant and causes contamination. Under no circumstances use any form of liquid fuel as this could cause an explosion. Your warranty will be rendered void if you burn non-recommended fuel in your stove and cause it to overheat.



WARNING

If you use incorrect wood or wood that is too damp, this may cause soot to form in the chimney, possibly leading to a chimney fire. If this happens, close off all air supplies to your stove if a valve connected to an AirSystem connection from outside is installed.



CALL THE FIRE SERVICE IF YOUR CHIMNEY CATCHES FIRE.

Never use water to put the fire out! Then contact a chimney sweep to check your stove and chimney.

RECOMMENDED AMOUNT OF WOOD FOR STOKING THE FIRE

The recommended amount of wood to burn after lighting depends on your stove model. Based on the nominal output of your stove, you can read the recommended amount of wood to use for refuelling.

By reading the CE labelling plate (or finding the output on our website), the stove has a nominal output of 5.2 kW, which means that the recommended amount of wood to be used when refueling is 1.3 kg divided into 2-3 pieces of wood logs. The stove is fired as intermittent operation and refuelling is done after 51 minutes.

NOMINAL OUTPUT	5.2 kW
RECOMMENDED VOLUME OF WOOD FOR STOKING	1.3 kg
MAX. KG OF WOOD PER HOUR	2.5 kg
WOOD LOGS	Max. 3
TIME INTERVAL FOR REFUELLING	51 min.

DO NOT OVERFIRE

Do not overfire the stove. The maximum volume of wood that may be burned in your stove is 2.5 kg. wood per. hour. It is important not to overfire, as this can cause damage to the stove. Never cover the holes in the back plate.

If you exceed the limits for the volume of wood specified in the table, the stove will be deemed overfired and will no longer be covered by the manufacturer's warranty, as excessive heat can irreparably damage your stove.

TESTING YOUR STOVE

You can test how your stove is burning by checking:

- Is the ash pale or white?
- Are the walls of the combustion chamber soot-free?
- Is the smoke from your chimney almost invisible?

If you answer "yes" to all three of these questions, your stove is burning well.



LIGHTING YOUR STOVE FOR THE FIRST TIME

When you use your stove for the first time, it is best to light a small fire initially so that it "gets used to" the high temperatures. There may be a little odour and smoke due to the materials used in the stove – but this will soon disappear and it will only occur the first couple of times you light your stove. Make sure you allow this smoke to escape. The first time you light your stove, it is also recommended that you should open and close the door at regular intervals to prevent the seal on the door sticking.

If your stove has been left unused over the summer, for example, light a small fire the first time you start using it again. Your stove may give off a slight odour the first time you light it after any length of time.

NOTE:

Remember to open and close the door slowly when adding wood. This will not cause overpressure in the chimney and cause smoke to emerge into the room.



REMEMBER!

When you use your stove for the first time, it is important for you to vent it while the paint settles (the stove gives off an odour and a small amount of smoke). This process may be repeated the first couple of times you use your stove. This will decline when your stove has reached its maximum temperature. Avoid touching the paint on your stove before lighting it for the first time and before the stove has cooled completely.




It is worthwhile spending some time finding out how best to operate the damper on your stove. This will ensure your wood burns as effectively as possible and gives you the most beautiful fire.

MANUAL AIR DAMPER ADJUSTMENT

The three settings on the damper are adjusted by rotating it from side to side.

POSITION 1.

The damper on the stove is set to fully open at start-up. Push the damper all the way to the right. The air damper is fully open and provides full air when starting your stove. This position is solely for use when starting your stove (approx. 10-20 minutes) and refueling and is not used during normal operation.

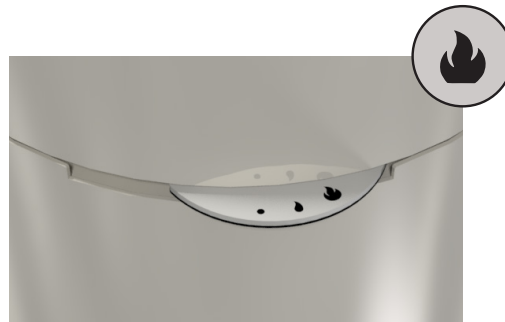

POS 1 - STARTUP

POSITION 2.

The damper closes slightly as the fire takes hold. Push the handle to the left to the first "notch". This is the central position. During regular burning, we recommend placing the damper between position 2 and 3. When the damper is set correctly, the flames are clear and yellow.



POS 2 - IN OPERATION

POSITION 3.

Push the handle all the way to the left. The air damper is closed, which keeps the air supply to a minimum. This setting should be avoided while your stove is operation, but it can be used when your stove is not in use.



POS 3 - CLOSED

Combustion in your stove will be poor if it is not getting enough air, and in a worst-case scenario this may result in unburnt fumes, smoke, inefficient use of the wood and less heat. A dark smoke will emerge out of the chimney. The smoke from the chimney is almost invisible if the wood is burning correctly.

REMEMBER!

If you find your stove is getting too hot you should not turn the damper down all the way – instead, you should vent the stove. You cannot adjust the heat in the room using the damper – only the amount of wood you use can affect this.



WARNING

Never use petrol, lamp oil, kerosene, charcoal lighter fluid, ethyl alcohol or similar liquids to start or "re-ignite" a fire in the heater. Keep all such liquids well away from the heater while it is in use.






IGNITION AND REFUELLING

Follow the instructions 1-5 below for correct ignition and use of the stove with manual damper.




You should **never** open the door when the flames are high, as they can damage the paint on the stove.

- ① Begin by stacking 12 pieces of split firewood in layers of four at the bottom of the stove. Place the ignition bags between layers 2 and 3, as shown in the image. Place the remaining two sticks. The split firewood should measure about 4x3x23 cm. It is critical that there is air between the pieces; otherwise, the fire will struggle to take hold.

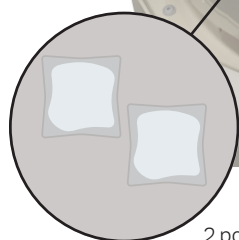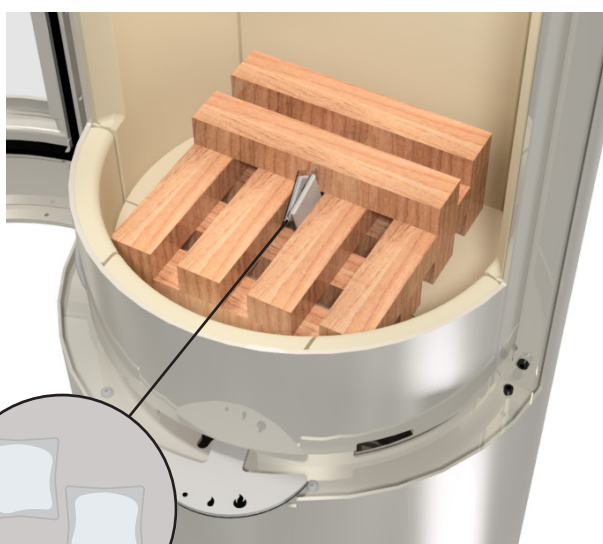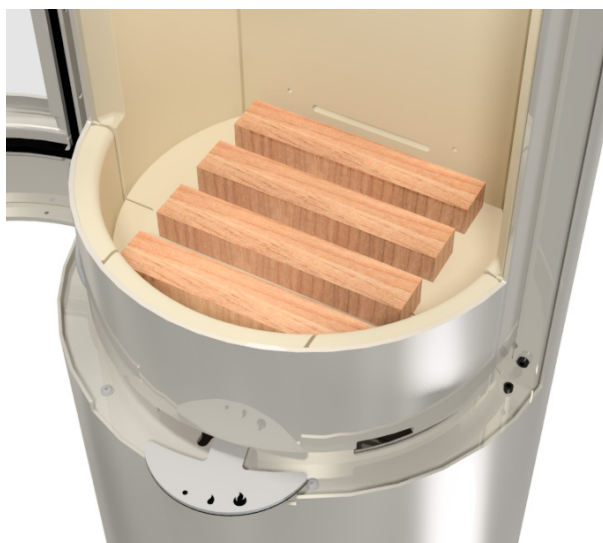



2 pcs ignition bags

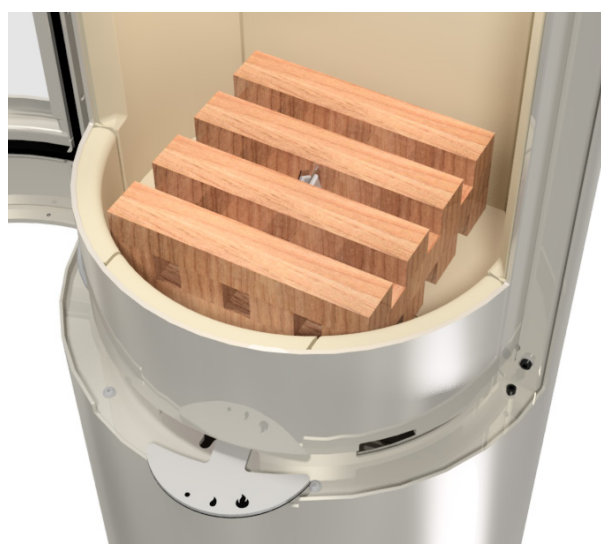


WARNING

During use, the wood stove becomes hot, particularly the exterior surfaces, and should be handled with caution. Therefore, use gloves.

- ② Set the air damper to the open position. Light the fire by igniting the two ignition bags placed between the layers.

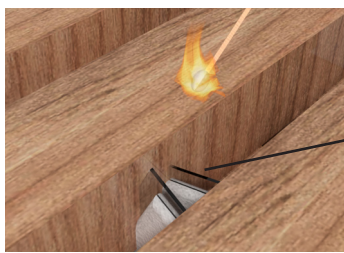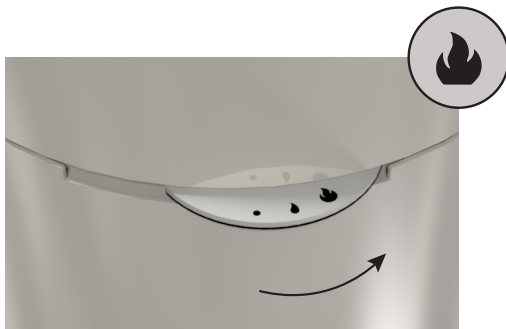


Igniting the ignition bags

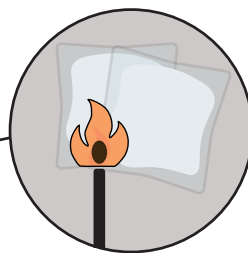

NOTE! - It is important to get the wood burning quickly.

- ③ When the fire has a firm grip on the sticks, set the air damper to the centre position.

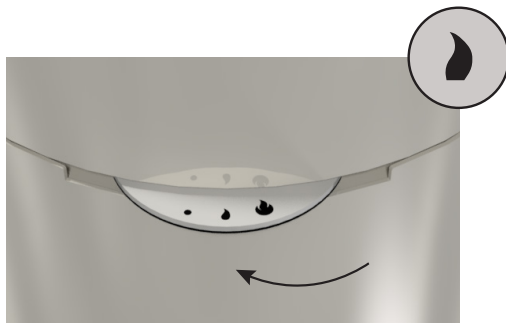



WARNING

To ensure safe combustion, the flames must be clear and yellow or the embers must be clear – the wood must never sit and “smoulder”. If the fire is merely smouldering or smoking and insufficient air is supplied, this will cause uncombusted fumes to form. Fumes may ignite and explode. This may cause damage, and potentially injure people.

THEREFORE, NEVER CLOSE OFF THE AIR SUPPLY ENTIRELY WHEN LIGHTING YOUR STOVE.





- ④ When the last flames have died and there is a nice layer of embers, add two to three pieces of wood. Only add new firewood when there are only embers in the stove, NOT when there are flames and while the fire is in full flame.

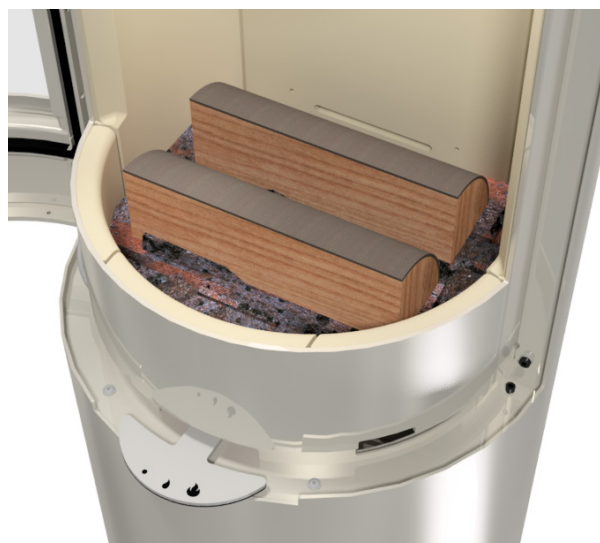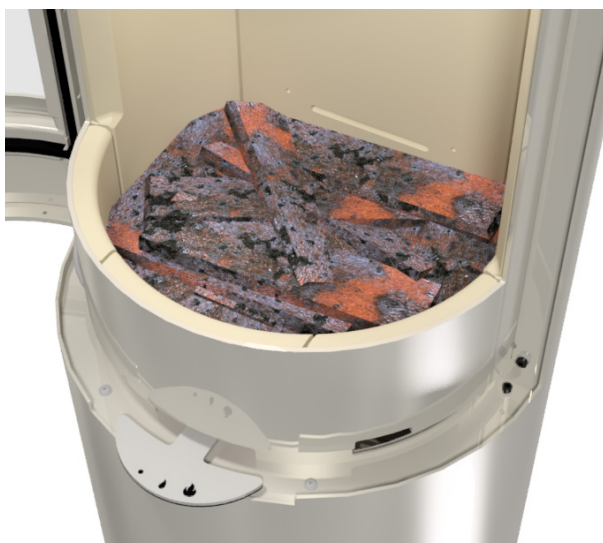

If the fire has burned down too far and there is not enough embers, start the lighting process all over again.

- ⑤ After 5 minutes - or when there are clear yellow flames - gradually close the damper. However, do not close the damper completely until the combustion process is complete and there are no more embers in the stove.

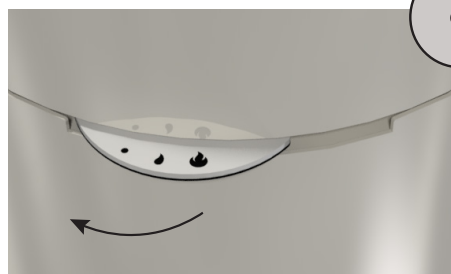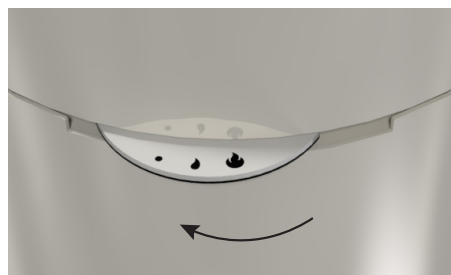

The door should always be kept closed except during firing and fuelling. If the stove is cold and the window has condensation, it may help to leave the door ajar for 2-3 minutes during firing or loading to ensure that the fire gets a good grip and sufficient heat enters the chamber. However, it is important to always follow and observe local precautions, including those referring to applicable national and European standards, when operating the stove.

CLEVERAIR


If your stove is equipped with CleverAir, simply light it and add new wood. With CleverAir, the stove regulates the air itself. This happens as the temperature rises and the stove heats up. CleverAir ensures proper air supply and efficient combustion.

1. Light the wood-burning stove. As described in the section 'Ignition and refuelling'.
2. New wood may only be added when there are only embers in the stove, and NOT when there are flames and the fire is in full swing. When there are no longer any flames in the stove but only embers, wait 10-12 minutes from when the last flame has gone out before adding two to three pieces of wood.
3. CleverAir regulates the air itself based on the heat in the combustion chamber. The hotter it is, the less air is supplied. It is therefore important to give CleverAir the best conditions to ensure the correct air supply and efficient combustion.



CONVECTION DAMPER

The stove can be purchased with a convection damper in the top plate. Make sure that the upper convection is closed during ignition to ensure faster heating. When the stove is hot, open the upper convection and release the heat into the room.

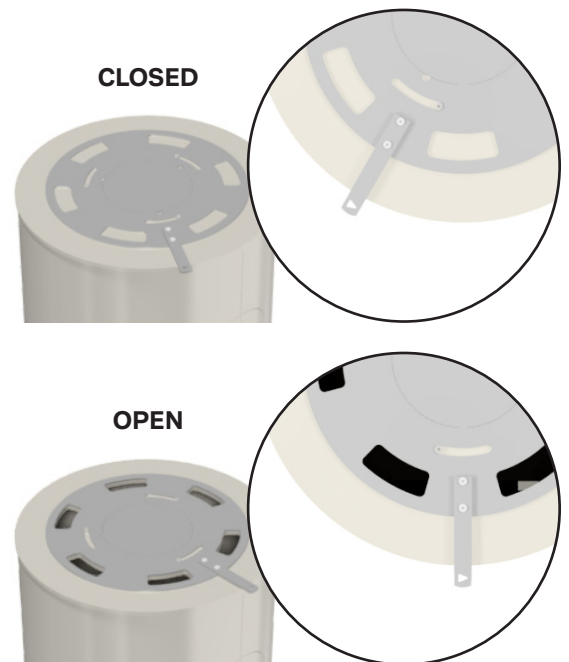

ELECTRONICAIR

If your stove is equipped with ElectronicAir, simply light it and add new wood. With ElectronicAir, the stove regulates the air itself.

ElectronicAir is an electronic system that is programmed to regulate the combustion air in the wood-burning stove. Two thermocouples constantly communicate with the receiver and remote control. Based on this communication, the damper opens or closes automatically to ensure the optimal combustion during the start-up and continuous burning. The LED indicates when the wood-burning stove automatically changes the damper's position. When the wood-burning stove is not in use, the damper is fully closed. When the door is opened, the door switch ensures that the damper is fully open to create extra air when starting the fire and when stoking the fire.

If the batteries in the receiver or remote control become flat, the wood-burning stove will continue to function. But the wood-burning stove damper will always be fully open.


START-UP

We recommend that only alkaline batteries or equivalent high-quality batteries are used. The batteries should be replaced before using the wood-burning stove for the first in the year. Do not use a pointed item to remove old batteries.

REMOTE CONTROL

Use qty. 2 AAA batteries for the remote control.

1. First, insert new batteries in the remote control.
2. The remote control must be in the manual setting for the remote control and the receiver to synchronise. If the remote control is in the automatic setting, set it to manual by briefly pushing the 'up' and 'down' buttons at the same time.

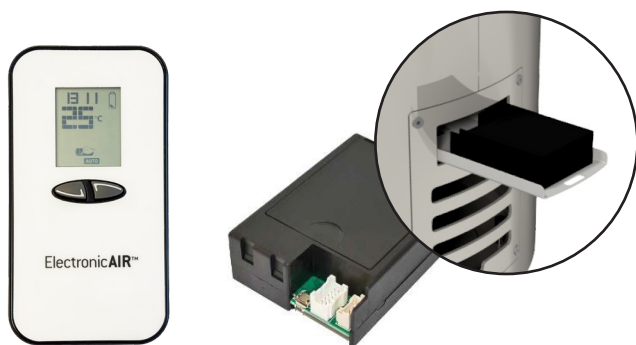

Remote control

Receiver

RECEIVER

Use qty. 4 AA batteries for the receiver. The receiver is positioned in the opening behind the wood-burning stove. Pull out the tray with the receiver to gain access to the batteries (see drawing).

SYNCHRONISATION OF THE REMOTE CONTROL AND RECEIVER


The remote control must now be synchronised using the wood-burning stove receiver.

1. Insert batteries in the receiver.
2. The LED light in the front of the wood-burning stove should flash yellow and then light green. This means that the damper is operating a start-up reference test. You may also hear a 'click' sound, which is completely normal. This process may take up to two minutes.
3. After the test is finished, the LED light will flash red for 20 seconds. During this time, the remote control and receiver are synchronised*. First, press the 'up' button and then press the 'down' button.
4. The LED light will briefly light green when the synchronisation is complete and then go out.

ATTENTION!

Whenever the batteries are changed in the receiver, synchronisation must be repeated.

*If you did not manage to synchronise the remote control and the receiver during this time, remove the batteries and then put them back. You can then repeat the synchronisation process.

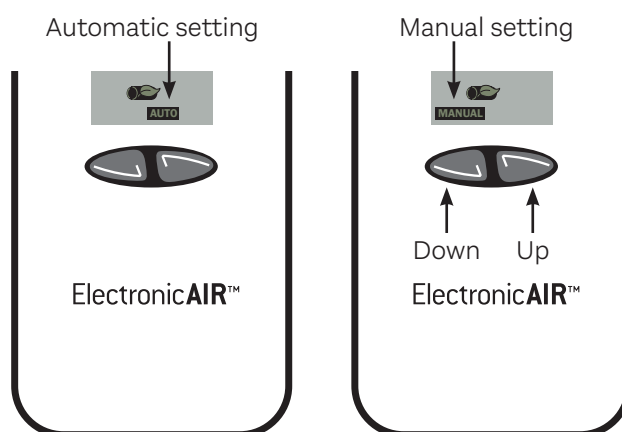

SETTING THE REMOTE CONTROL

The remote control can be set to display the time, temperature, etc. To enter the manual setting menu, press the 'up' button and 'down' button at the same time for about five seconds, until the display changes.

MENU 1:

Select whether you want to display the temperature in degrees Fahrenheit or degrees Celsius. The figure states the room temperature.

MENU 2:

Select whether you want to display the time in 24-hour or 12-hour format.

MENU 3:

Set the time. First select the hours.


MENU 4:

Next, select the minutes.

MENU 5:


Activate or de-activate the child lock.

When you have finished with the six settings, you must wait 15 seconds for the settings to be saved and the settings menu to be exited.

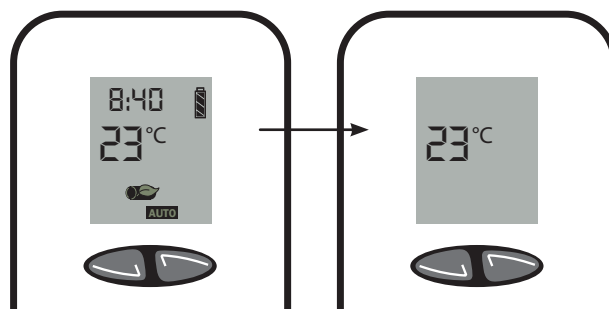

ATTENTION!

- To change the setting, press the 'up' button (the button on the right) will change the setting.
- To move to the next menu, press the 'down' button (the button on the left).
- Move to the next menu within 15 seconds.
- After 15 seconds of inactivity, the programming menu will be exited.
- Settings are saved automatically.

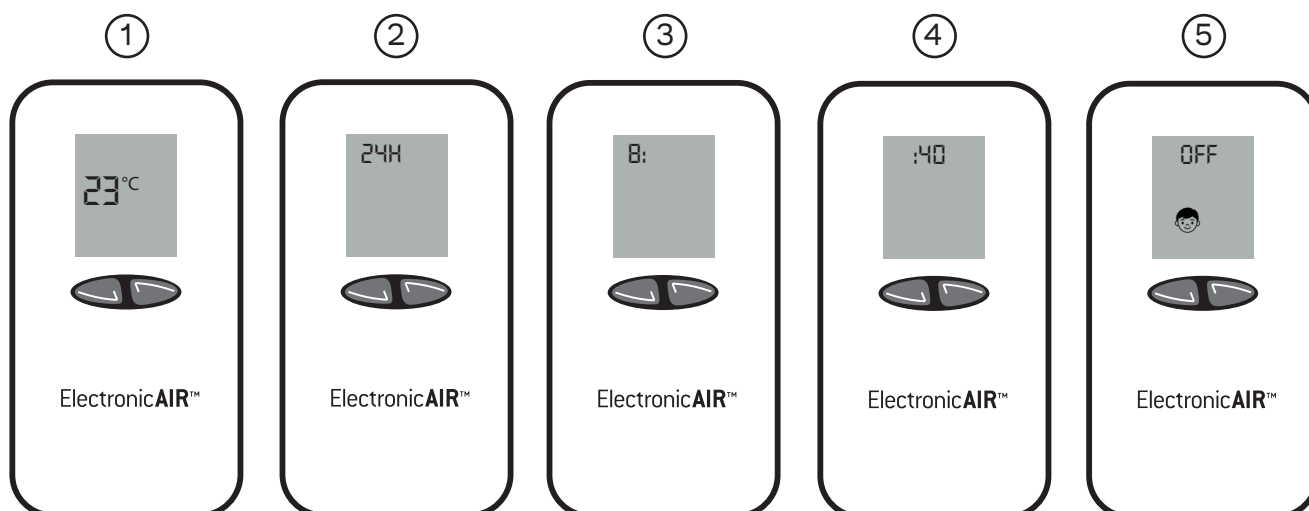

USE OF WOOD-BURNING STOVE WITH ELECTRONICAIR

After the remote control is synchronised and set, the wood-burning stove can be used. The wood-burning stove can be used with automatic or manual operation.

AUTOMATIC OPERATION

If you want the damper on the wood-burning stove to be regulated automatically, you can use the remote control to set the stove to automatic operation. Follow this guide showing how to operate a wood-burning stove with ElectronicAir that is in automatic operation mode.

1. First, you must ensure that the wood-burning stove has been set to automatic operation. To switch to automatic operation, briefly press the 'up' button and 'down' button at the same time. "Auto" is shown in the display.
2. Light the wood-burning stove. As described in the section 'Lighting your stove correctly'.
3. Once there is a good layer of embers, place two logs on the fire.
4. ElectronicAir regulates the actual combustion air during burning.

MANUAL OPERATION

If you wish to personally regulate the wood-burning stove, you can use the remote control to set the stove to manual operation. Follow this guide showing how to operate a wood-burning stove with ElectronicAir that is in manual operation mode.

1. First, you must ensure that the wood-burning stove has been set to manual operation. To switch to manual operation, briefly press the 'up' button and 'down' button at the same time. "Manual" is shown in the display.
2. Light the wood-burning stove. As described in the section 'Lighting your stove correctly'.
3. Once there is a good layer of embers, place two logs on the fire.
4. Open and close the damper by using the two arrows on the remote control.



ATTENTION!

The LED light on the front of the wood-burning stove lights green when you open and close the door and the damper automatically regulates up or down. In addition, the LED light lights briefly when you press the buttons on the remote control. If the LED light lights red or yellow, then please refer to the troubleshooting section below.

TROUBLESHOOTING

The table below lists the most frequent causes of why the LED light is lit red or yellow.

LED light	Cause	Solution
The LED light flashes yellow twice a minute.	Warning: Low battery power in the receiver.	Replace the batteries in the receiver.
LED light is constantly lit red.	Fault: The receiver has no power. In this situation, the damper opens completely and stays open until the batteries are replaced.	Replace the batteries in the receiver.
The LED light flashes yellow three times a minute.	Warning: The door is open and the sensor indicates the temperature is over 50° C.	Close the door to the wood-burning stove.

DISTANCE TO FURNITURE

Ensure that flammable objects (e.g., furniture) are not closer than the distances specified in the table (fire risk).

MODEL	DISTANCE TO FURNITURE (MIN.)
From front door	850 mm
From side	500 mm

**WARNING**


It is important to observe these distances to combustible material as radiation, especially through glass surfaces, can ignite flammable objects around the stove.



CLEANING THE FLUE

To reach the flue, carefully remove the vermiculite smoke deflector plate and the smoke baffle made of steel. Remove the smoke deflector plate by lifting it up, pulling it forward and down so that the rear end is released from the vertical plates. Remove the smoke baffle by lifting it up and forwards so that it comes free of the fixings.

Remove dirt and dust and carefully insert in reverse order.

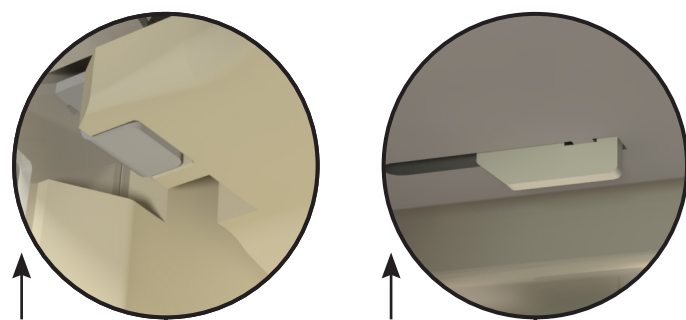

Remove the smoke deflector plate by lifting it up, pulling it forward and down.

The smoke baffle by lifting it up and forwards to release it from the fixings

WARNING


Smoke from blocked chimneys is dangerous. Always make sure the chimney and flue pipes are free of blockages and clean according to instructions. Use only recommended fuel for clean combustion and safe operation.

REMOVING THE COMBUSTION CHAMBER LINING

The combustion chamber lining protects the wood burning stove against the heat from the fire. The large temperature fluctuations can cause cracks in the plates, which, however, do not affect the functionality of the stove. The plates only need to be replaced when they begin to crumble after several years of use. The plates are only laid or placed into the stove, and can thus be replaced without problems by you or your dealer.

Removal of the combustion chamber lining is done in the following order.

1. Remove the smoke deflector plate (1) by pulling it forwards and downwards so that the rear end is free of the vertical plates. The smoke deflector can now be carefully removed.
2. Remove the front panels (3).
3. Remove the base panels (3).
4. Loosen the side plates (4) by turning the front end of the plate towards the center of the stove. Then take them out carefully.
5. The back plate (5) is now loose and can be removed.

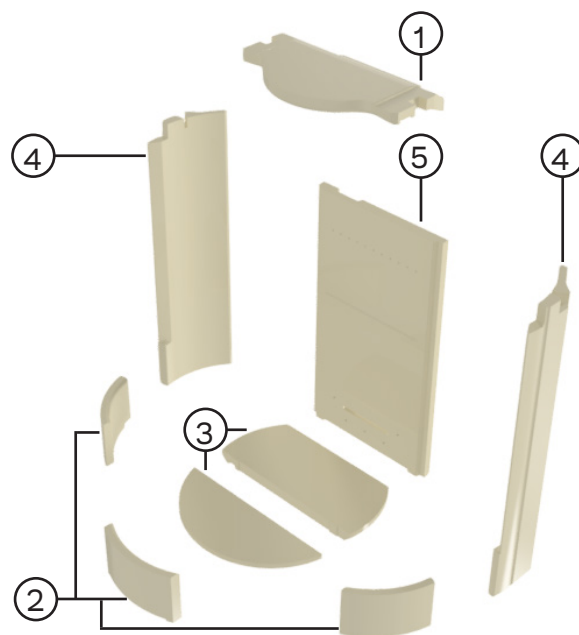

Carefully insert again in reverse order.

CHECKING THE CHIMNEY

The chimney is what makes your stove work. Remember – even the best stove will not work perfectly unless the chimney is drawing correctly and to the necessary extent. The chimney and flue collar must always be checked for blockages before each new heating season. Your chimney sweep should check both the chimney and your stove at least once a year. You should always contact your chimney sweep if you are in any doubt as regards the condition of your chimney.

If there your chimney is drawing too much, fitting the chimney or flue with a regulating damper is recommended. Contact your dealer.

REPLACING SEALS


Inspect your stove for damage regularly, both inside and out, in particular the seals and heat insulating plates. The seals must be replaced if they are worn or fractured.

MOVING PARTS

Door hinges and door locks should be lubricated as needed, but it is important to lubricate on a regular basis so that damage is not caused by a single event. We recommend that you use our lubricant spray exclusively, as using other products can cause odour and residue. Contact your dealer to obtain the lubricant.

BLOCKING THE AIR INTAKE

The stove needs permanent and sufficient air in order to burn optimally and safely. The stove draws air from the gaps along the stove and under the stove, so it is important that there is air from the bottom edge to the floor. The levelling shoes must therefore not be adjusted all the way down so that no air can get under the stove. It is therefore important that the air intake areas are not blocked or closed, as the stove takes air from the room through these areas, among other things.

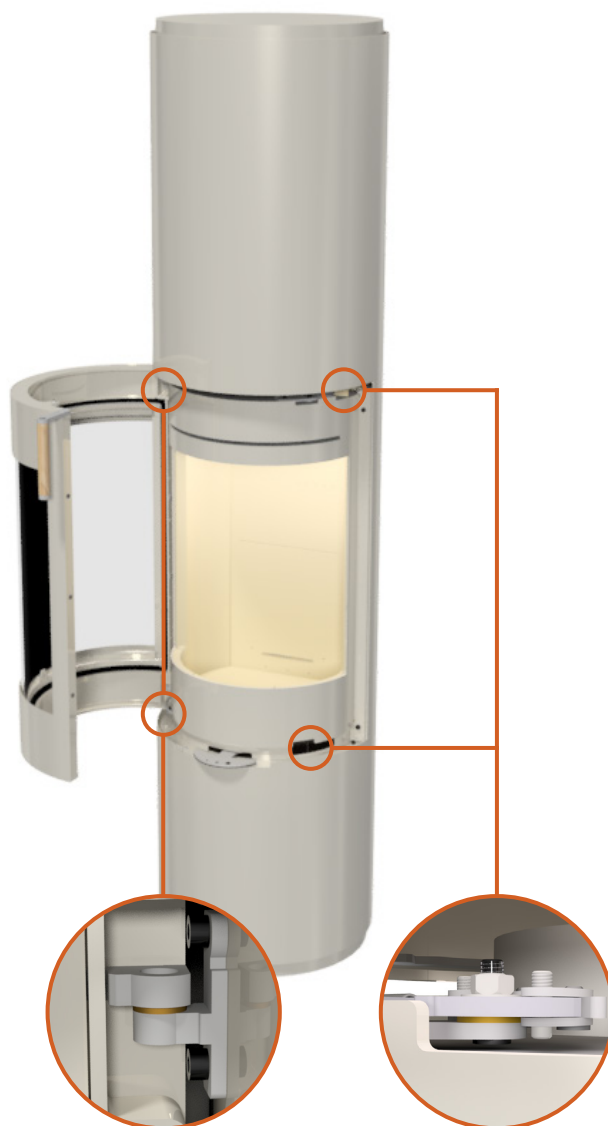

When using your stove, it is important for you to know how to maintain it. This section describes how to clean and maintain your stove.

CLEANING THE OUTSIDE OF YOUR STOVE

When cleaning the outside of your stove, how you go about this is dependent on the colour of the stove and what it is made of. The table below shows how to clean your stove.

NOTE: Your stove must only be cleaned when cold.

It is important to clean your stove regularly. If dirt and stains are left on the stove (particularly in pale areas), there is a risk of the stains being burnt on.

If you need to maintain the surface, all colours are available as spray paints. If general cleaning is not enough to remove any discolouration, please contact your RAIS/attika dealer.

STOVE COLOUR	PROCEDURE
White Nickel Platinum Sand	Wipe with RAIS Stove cleaner or warm, soapy water (washing-up liquid)
Sort Mocha	No liquids. Wipe with a wrung-out cloth.
Porto- / Soap-stone	Wipe with a wrung-out cloth, otherwise use 3M Scotch-Brite (finishing pads ultra fine), rubbing lightly on the dirty area until the stain is removed.

GLASS

All RAIS and attika stoves come with a glass system, which means that hot air flows down over the glass and removes any soot residues. This happens when the fire is burning correctly and there is a high level of combustion in the stove. However, you may still find some soot on the glass when using your stove.

CLEANING THE GLASS


There are three effective ways of cleaning the glass on your stove:

- Schott dry sponge. Available from most stove dealers.
- Window cleaner suitable for stoves. Follow the instructions. When using detergent, you must always rinse with clean water so that any detergent residues are also removed. This will prevent residues burning onto the glass and leaving marks the next time your stove gets hot.
- Cleaning with ash. Clean the inside of the glass with a damp cloth dipped in the very fine ash in the stove. Dry and polish with a soft cloth.

The stove must be cold when you start.

CLEANING THE COMBUSTION CHAMBER

Empty the ash from the combustion chamber as needed. You can carefully remove the ash with a small hand shovel. The ash must be completely cooled before disposal, as embers can remain hidden in it for up to two days. Remember to wear gloves when the stove is hot. Never empty the combustion chamber completely of ash, as the fire burns best with a small layer of ash. Ash is disposed of with regular household waste.

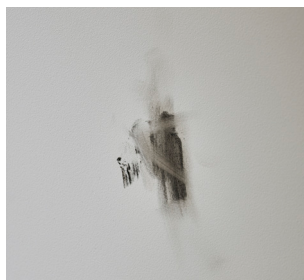

TIP! - We recommend that you always use regular, mild detergents for cleaning your stove. Always test a detergent in a non-visible location (behind the stove, for example) before cleaning.

CONVECTION

All RAIS/attika stoves are convection stoves. Essentially, convection is all about the distribution of heat throughout the room. A convection stove is good at circulating hot air throughout the room. Cold air is drawn in at the base of the combustion chamber and heated. The hot air then rises and flows out at the top and creates circulation in the room. Convection ensures that heat is distributed evenly and comfortably throughout the room. Be aware that all exterior surfaces will be hot, so do not touch the stove when it is lit.

GLASS SYSTEM

All RAIS and attika stoves come with a glass system, which means that hot air flows down over the glass and removes any soot residues. This happens when the fire is burning correctly and there is a high level of combustion in the stove.

CO₂ AND THE ENVIRONMENT

You may also be wondering how your new stove will affect the environment, and not least your CO₂ emissions. Burning wood is regarded as CO₂-neutral, as the amount of carbon dioxide emitted when wood is burnt correctly is equivalent to the amount of carbon dioxide that the tree would have given off as it decayed in the forest.

As regards the environment, all RAIS stoves do of course meet the very strictest requirements in terms of efficiency and discharge of residual particles, and they are at the very front of the field in the European market when it comes to eco-friendliness. We are constantly working to develop and optimise combustion, and work in partnership with organisations such as the Danish Technological Institute.


VENTILATION

The stove needs permanent and sufficient air to operate safely and efficiently. A permanent air supply can be installed in the room for the stove's combustion air - through the AirSystem connection. Under no circumstances should this air supply be closed during operation. Note that any mechanical extraction such as a cooker hood can reduce the air supply. The stove has an air consumption of min. 12.6 m³/h.

EXTERNAL AIR SUPPLY – AIRSYSTEM

If you live in a low-energy building, your home is insulated or you just live in a recently built house, you may find it necessary to provide an air supply from outside and directly into the stove. This may also be necessary if there is vigorous extraction near to your stove, such as an extractor hood. This external air supply is what we call AirSystem. All our stoves have the option of providing an external air supply. If there is no external air supply, the stove uses air in the room for combustion instead. With AirSystem, the air is taken from outside.

The air inlet for the system can be concealed by installing it either in the floor or in the wall behind the stove. During use, the air valve should be set to the open position to allow outside air to enter the stove. If the stove is unused for a period of time, you can close the air vent to prevent cold air from entering the installation room.

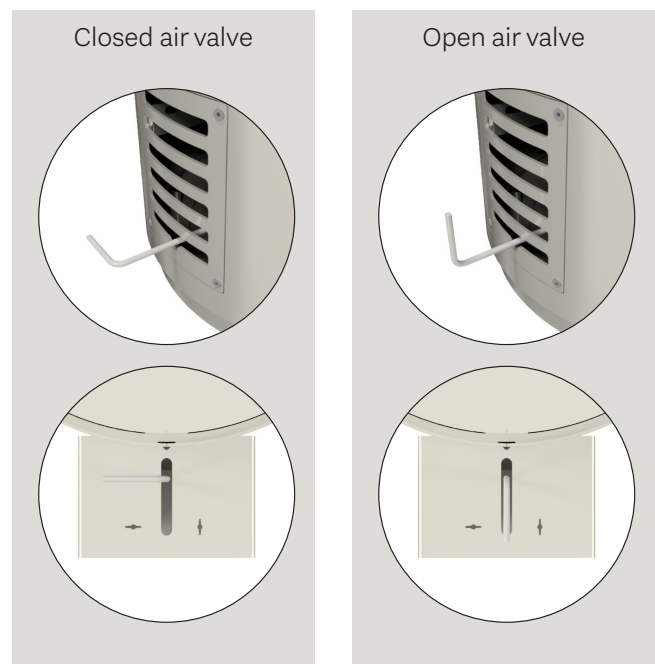

ATTENTION!

In countries where legislation does not allow closing the air supply, the damper plate in the air valve must be removed.

SHARED FLUE

IMPORTANT! it is **NOT** allowed to connect multiple stoves to the same chimney in the **UK**.

In other countries it is permitted to connect several stoves to the same chimney, provided that the two stoves have the same owner, as in an example where a house has two floors with one stove in the living room and one on the first floor. It is a requirement that the inlets must be positioned so that there is a clearance difference between them of at least 250 mm.

GUIDE TO NOMINAL TEST FIRING

Perform the test as described below if you want to do a nominal test firing. Follow the instructions 1-3 below for ignition and pre-firing before test firing, where the results are measured. Pre-firing is used to raise the temperature inside the combustion chamber before measurement and to create a good base glow layer. The interval before refuelling is 51 minutes.




1.3 kg



240 mm



51 min.

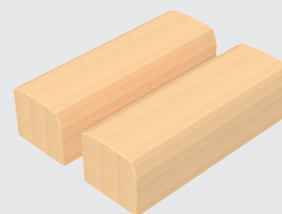


1 IGNITION

Ignition is done in the same way as the instructions for ignition on pages 8-9. Start by placing 12 pieces of split firewood with a total weight of approx. 1.6 kg in layers of 4 in the bottom of the stove. Close the door ajar for 5 minutes and set the damper to the open position for 5 minutes. Then set the damper to the centre position.

⌚ 5 min



⌚ 5 min.

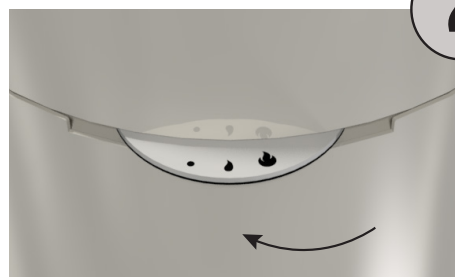

The damper is then set in the centre.

2 PRE-FIRING

Pre-firing is used to increase the temperature inside the combustion chamber prior to the final test. The embers are levelled before refuelling. Pre-firing is carried out in the same way as the test firing. See section 3 for a description of filling and operation. Two pre-fires are made before the test firing is initiated to achieve a basic glow layer of around 490 g. From here, about 5 test cycles are run, with each test cycle ending when the weight is around 30 g. The criterion is that the weight at the end of the cycle must not deviate more than 100 g from the previous cycle.

③ TEST FIRING

Place 2 pieces of birch wood without bark with a total weight of approx. 1.3 kg (divided equally between the two pieces of wood). The wood should have a length of 240 mm and a square, cross-section. The wood must be laid very tightly and not pressed into the embers. Close the door immediately after filling. Set the damper to fully open for 2 minutes, then to the middle position for 50 seconds. Next, carefully adjust the damper downwards and set it between the middle position and the closed position for the remainder of the test.




It is important that the two pieces of briquette wood are placed centrally in the stove at a 45-degree angle to the door and according to the instructions. The sticks should be placed 3-4 cm apart.




*To achieve equivalent test results as indicated, it is important to set the damper correctly during use. Move the handle gently in a sliding motion. The damper is finally adjusted between the middle position and the closed position so that there is 12 mm on the left side of the handle to the edge of the damper opening. This damper setting is kept for the remaining part of the test.

⌚ 2 min in full open position

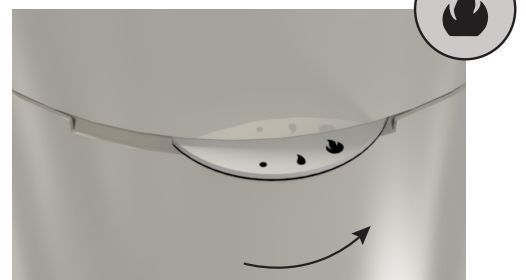


⌚ 50 sec. in the middle

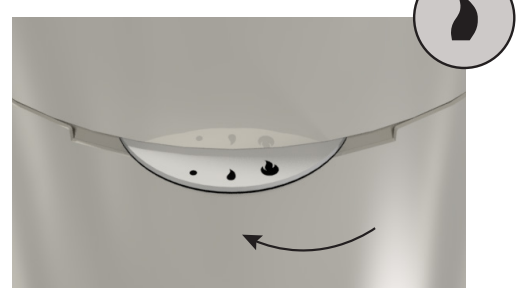

⌚ Remaining time (12 min)



The damper is then set between the middle position and the closed position. There must be *12 mm on the left side of the handle to the edge of the damper opening.

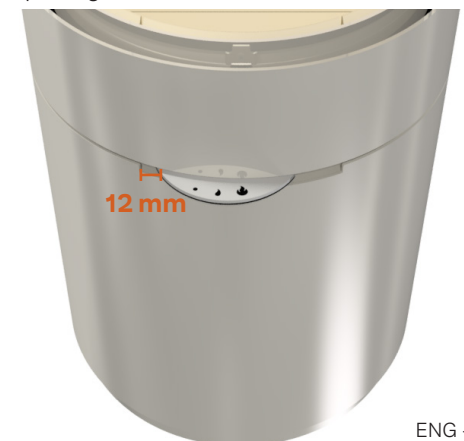

SPECIFICATIONS

DTI Ref.: 300-ELAB-2401-EN

Pilar

RAIS®		Nominal	Standard: EN16510-2-1:2022
		Wood logs	Fuel
P	kW	5.2	Nominal heat output
P _{SH}	kW	5.2	Space heat output
η	%	≥ 75	Efficiency
η _s	%	≥ 65	Seasonal space heat efficiency
EEL	-	107	Class A+
CO (13% O ₂)	mg/Nm ³	≤ 1500	CO emission at 13 % oxygen content
NO _x (13% O ₂)	mg/Nm ³	≤ 200	NO _x emission at 13 % oxygen content
OGC (13% O ₂)	mg/Nm ³	≤ 120	Hydrocarbon emission at 13 % oxygen content
PM (13% O ₂)	mg/Nm ³	≤ 40	Particulate matter emission at 13 % oxygen content
p	Pa	12	Minimum flue draught
T _s	°C	311	Flue gas outlet temperature at the flue pipe collar
Tclass	-	T400 G	Chimney designation according to the appropriate chimney standard
Φ _{fg}	g/s	4.6	Flue gas mass flow
V _h	m ³ /h	0	Standing air loss
CON or INT	-	INT	Intermittent operation (INT)
t	min	51	Fuelling time
M _a	kg	1.3	Recommended wood quantity when filling (Divided into 2-3 pieces of firewood)
d _{out}	mm	150	The diameter of the flue pipe collar
L, W, H	mm	Ø462 , H1930	Overall dimensions of the appliance (length, width, height)
L _c , W _c , H _c	mm	L352 , W287 , H285*	Combustion chamber (length/width/height)
m	kg	139	Mass of the appliance
m _{chim}	kg	20	Maximum load of the chimney
Type	-	CA	Appliance intended to be supplied with combustion air via a combustion air duct

*Max. load limit

The stove was tested and approved by:
 DTI - Danish Technological Institute
 Teknologiparken Kongsvang Allé 29
 8000 Aarhus C, Denmark
 www.dti.dk
 Tel.: +45 7220 2000,
 Fax: +45 7220 1019

Set-up distances			
d_R	mm	100	Minimum distance from the back of the stove to combustible material
d_S	mm	500	Minimum distances from the sides to combustible material
d_c	mm	385	Minimum distance from the top to combustible material at the ceiling
d_P	mm	850	Minimum distances from the front to combustible material (Distance to furniture)
d_F	mm	0**	Minimum distances from the front to combustible material in bottom front radiation area
d_L	mm	0**	Minimum distances from the front to combustible material in side front radiation area
$d_{B'}$	mm	300	Minimum distance from the bottom edge of the door to the floor.
d_{non}	mm	50	Minimum distances to non-combustible walls
			Read and follow the user operating instructions

**0 mm: Since 65 K is not exceeded by radiation on the floor in front and/or on the side wall. Cf. EN16510 Note 3.

Read the section about installation distances in the installation manual.

WHY IS MY STOVE NOT BURNING THE WAY IT SHOULD?

In most cases, we find that stoves do not burn the way they should because of the way they have been let. Please read the section entitled "General information on lighting your stove" carefully before getting started. There are three things in particular that cause stoves not to burn correctly:

- The damp is open too far (it should only be fully open during the initial phase, i.e. for 5-10 minutes).
- The door is opened too quickly after lighting the stove. Be patient and allow the fire to die down so that just glowing embers are left before you add more wood.
- You are not using enough wood, or the wood you are using is too thick or too wet. It will be difficult to get your chimney to draw if the wood is not burning as it should.

WHY IS MY STOVE MAKING "CLICKING NOISES"?

Little clicking noises are normal when the stove is in use. This is due to hot materials expanding.

WHY DOES THE GLASS TURN BLACK?

This may be because your wood is too wet or the damper on the stove is adjusted too far down. Check how damp your wood is, and make sure you give your stove enough air when lighting it before closing the door so that the stove warms up properly.

WHY IS SMOKE COMING OUT OF THE DOOR?

This may be because your chimney is not drawing properly. Check whether the flue or chimney is blocked. If your stove is situated near to the kitchen, check whether the extractor hood is switched on – if it is, switch it off and open a window near to the stove for a short time. This smoke may also appear if you open the door too quickly when adding new wood. Try opening the door more slowly.

WHY IS MY STOVE GIVING OFF AN ODOUR?

The stove may begin to give off smoke and odour if there is insufficient oxygen for combustion. Allow more air into your stove using the damper.

WHY IS MY STOVE GETTING TOO HOT?

You should not adjust your damper downwards if you find your stove is giving off too much heat in your room. The temperature can only be controlled by adjusting the amount of wood you use. Use less wood and vent the room.

WHY IS MY STOVE COVERED IN SOOT ON THE OUTSIDE, ABOVE THE DOOR?

Set on the outside of the stove is usually due to opening the door while there are still tall flames in the combustion chamber. Always wait until the fire has burned down before opening the door. This may also be caused by opening the door too quickly. Always open the door slowly and carefully. However, please be aware that it is not possible to prevent a small amount of ash and soot emerging when you use the stove.

WHY IS MY STOVE BURNING TOO FIERCELY?

If your stove is burning too fiercely, this may be due to a leak in the door seal. This has to be replaced as stated in the installation guide. It may also be due to your chimney drawing too much. In this case, a regulating damper should be fitted. You can ask a chimney sweep, fitter or dealer to come to your home and check whether your chimney is drawing correctly.

WHY IS MY STOVE NOT BURNING SUFFICIENTLY?

If your stove is not burning sufficiently, this may be due to several things: insufficient wood, insufficient supply of air to the ventilation in the room, failing to clean the flue, a leaking chimney or a leak between the chimney and the flue.

WHAT CAN I DO IF MY CHIMNEY IS NOT DRAWING PROPERLY?

If your chimney is failing to draw properly, this may be due to many different things:

- Too low a temperature difference – if your chimney is insulated poorly, for example.
- A high outdoor temperature (in summer, for example)
- No breeze
- The chimney is positioned too low and in a sheltered location
- The wrong air in the chimney
- The chimney and flue are blocked
- The house is too "sealed" (no fresh air supply)
- Negative smoke extraction (when the chimney is drawing poorly)

A cold chimney or difficult weather conditions can be compensated for by supplying more air to the stove than usual. If your chimney is continuing to malfunction, we recommend that you contact your dealer or chimney sweep.

I AM ENCOUNTERING OTHER DIFFICULTIES WITH MY STOVE

Many queries or issues relating to the use of stoves are down to local conditions (such as draughts, for example). If you are experiencing a problem for which no answer is given here, please contact your RAIS/attika dealer.

WARRANTY

RAIS or attika issues warranty on all models, commencing from the date of installation. We have already invested a great deal of effort in our inspection processes and looked at the quality of materials, manufacture and product safety.

THE WARRANTY DOES NOT COVER WEAR PARTS:

- Door and glass seals
- Ceramic glass
- Combustion chamber lining
- The surface appearance or the texture of natural stone
- The appearance of the stainless steel surfaces and colour changes
- Expansion blemishes

THE WARRANTY WILL BE RENDERED VOID IF:

- Your stove has been damaged due to overfiring
- Damage has been caused by external stresses
- Unsuitable fuel types have been used
- There has been failure to comply with statutory or recommended installation instructions
- You have made alterations to the stove yourself
- Your stove has not been serviced or maintained
- Using spare parts other than those recommended by RAIS/attika will invalidate the warranty. All interchangeable parts can be purchased as spare parts from your RAIS/attika dealer.

WARRANTY ON THE WEBSITE

Select your preferred language on the website.

ENG

PLEASE CONTACT YOUR DEALER IF YOUR STOVE IS DAMAGED.

If you make a claim on the warranty, we will decide on how the damage is to be remedied. If it is to be repaired, we will ensure that the repairs are carried out professionally.

Please see national and EU laws and regulations on renewed warranty periods in the case of warranties on repaired parts or parts supplied later. The applicable warranty terms and conditions are available from RAIS or attika at any time.

WARNING

For safety reasons, do not make unauthorised modifications to the stove. Only recommended spare parts may be used. The stove has been tested and approved with the recommended spare parts, and therefore RAIS/attika cannot be held responsible for safety in the event of modifications that contravene the recommendations.




DOWNCYCLING

When your stove is no longer usable in the distant future, it is important that it is sorted correctly. Below is an overview to help you on your way. A deeper description of the symbols can be found via the QR code

DOWNCYCLING OF PACKAGING

Do you need to know how to dispose of the packaging that the stove comes in. Scan the QR code for packaging disposal.

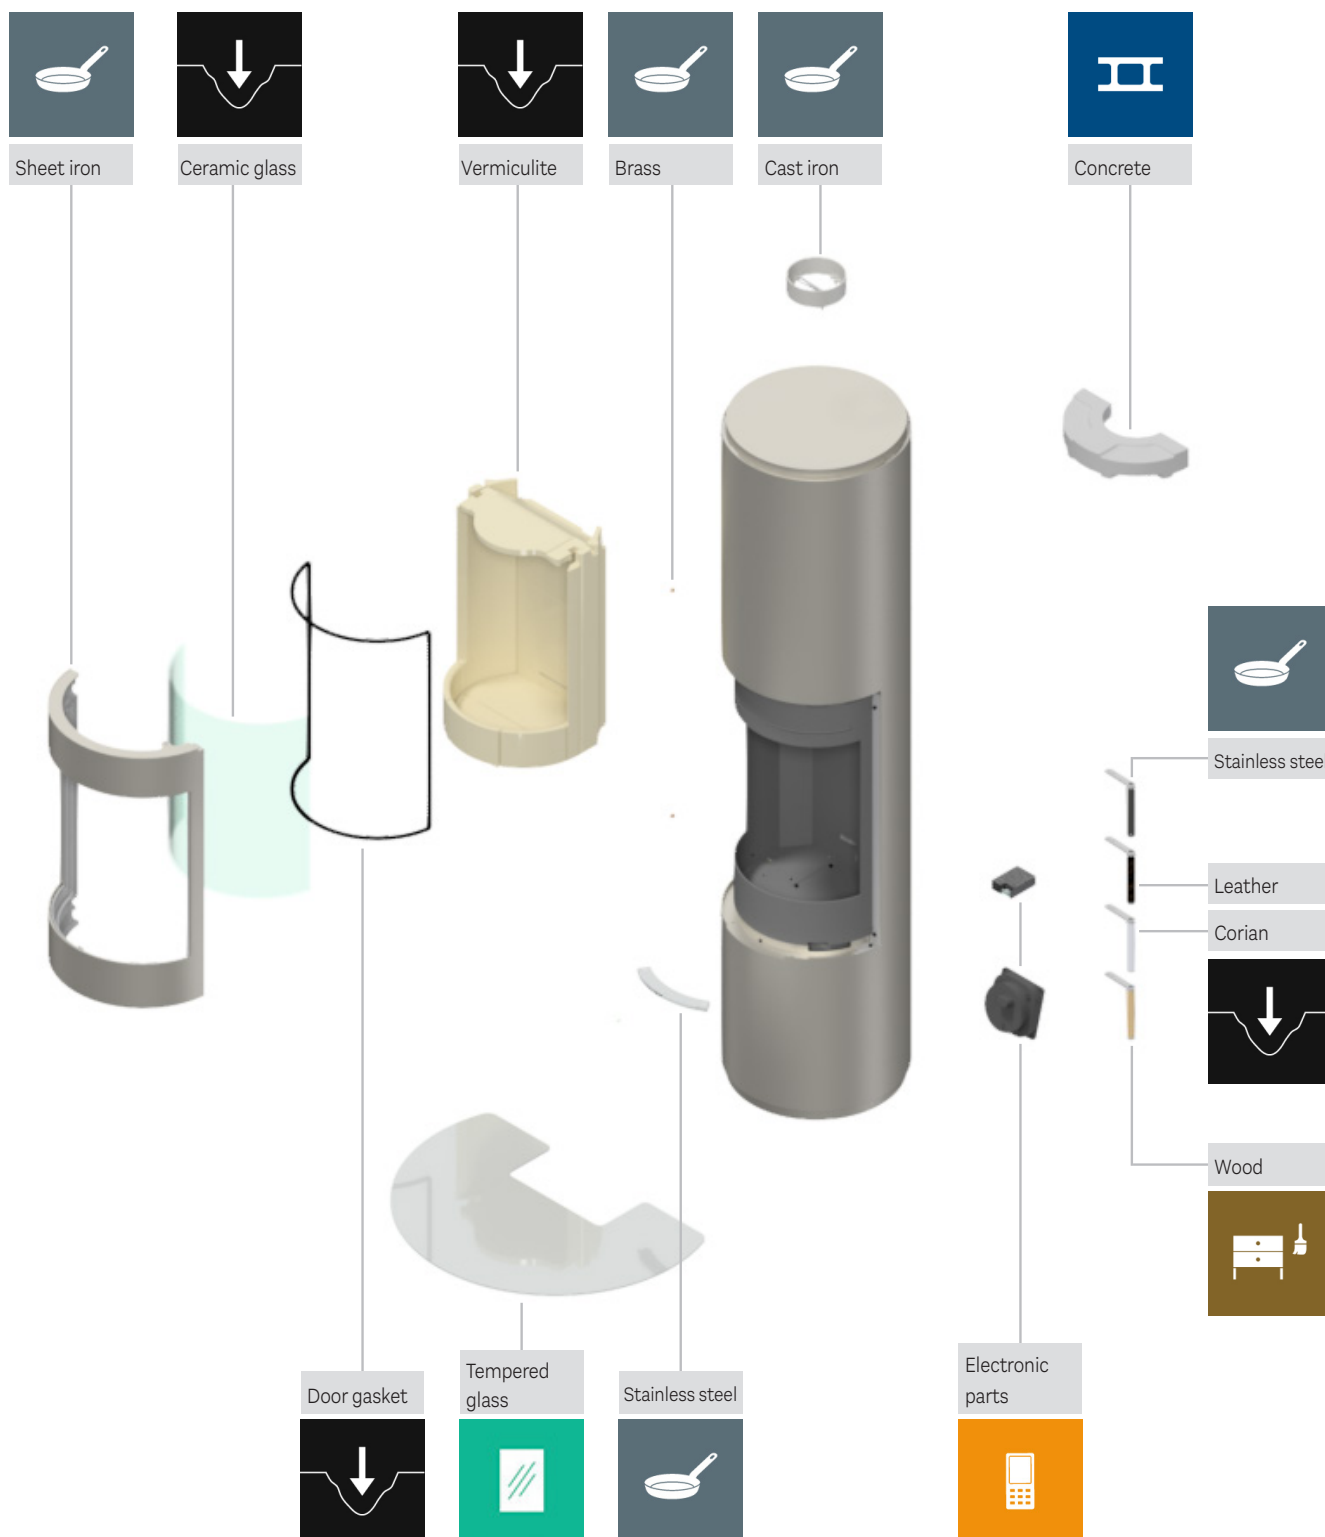

SPARE PARTS

If you need new spare parts for your product, you can scan the QR code to see which spare parts we offer. If spare parts other than those recommended by RAIS are used, the warranty will be cancelled. All interchangeable parts can be purchased as spare parts from your RAIS dealer.





Article number: 16-6521ENG



5 708252 446502

RAIS[®]

RAIS A/S
Industrivej 20
DK-9900 Frederikshavn
Denmark
www.rais.com

attika[®]
FEUERKULTUR

ATTIKA FEUER AG
Brunnmatt 16
CH-6330 Cham
Switzerland
www.attika.ch